


QUICK START GUIDE

ACCESSORIES LIST

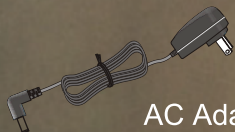

AC Adapter

STEP BY STEP CONNECT THE DEVICE

STEP 1

Insert SD/MMC/MS
with Jpeg format files

OR

Insert USB memory
stick with Jpeg format
files

STEP 2


Connect the wall outlet via AC adpater



AC100~240V


UNIT VIEW DESCRIPTION

FRONT VIEW

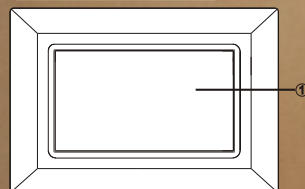

1.LCD Screen

 
TOP VIEW



1. Button
Press to pause or resume playback.
2. Button
Press to go to the previous file or page.
3. Button
Press to go to next file or page.

- 4.Rotate Button
Press to rotate the current picture.
- 5.MODE Button
Press to change the aspect ratio between 16:9 and 4:3.
- 6.POWER SAVE
Press to enter power save mode. Then press any button to exit the power save mode.

BACK VIEW




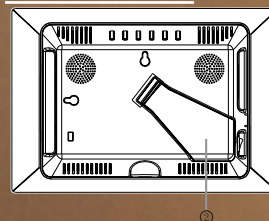

2.Bracket
Open to support the unit

SIDE VIEW



- 1.SD/MS /MMC Card Slot
Insert SD/MS/MMC card into this slot.
- 2.USB Port
Connect USB device, such as U disk.
- 3.DC 5V IN
Connect supplied adaptor.

Safety Advice

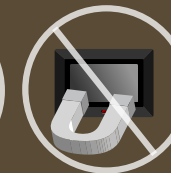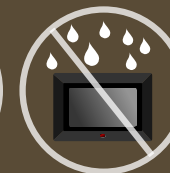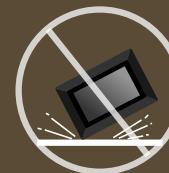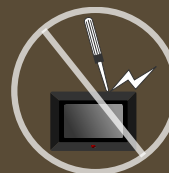

As with any digital media-based storage device, data should be backed up regularly. We strongly recommend that you observe the usage precautions laid out in this instruction, and also back up the data in your player regularly. In no event will Nextar be liable for any indirect, incidental, special or consequential damages to any persons caused by Nextar's negligence, or for any lost profits, lost savings, loss of use, lost revenues or lost data arising from or relating to this device, even if Nextar has been advised of the possibility of such damages. In no event will Nextar's liability or damages to you or any other person ever exceed the amount paid by you for the device, regardless of the form of the claim. Some countries/states do not allow the limitations or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.